

Core Blower Not Operating - 5100/7100/9100 Series

When the thermostat calls for heat, the system monitors the outlet water temperature and adds heat from the brick core as needed. If the outlet water temperature drops below the current outlet water temperature set point (as displayed in L127) the core blower is energized.

