


Error 06 - All Models

Error 6 indicates that the outdoor sensor temperature reading from the power line carrier (PLC) transmitting device is out of normal range. If PLC is NOT being utilized, verify that Configuration 3 (C003)/Location 20 (L020) is set to a value of zero (0). If PLC is being utilized, verify that C003/L020 is set to the same channel as the PLC transmitting device. Check the outdoor temperature sensor attached to the transmitting device and the transmitting device for proper operation.

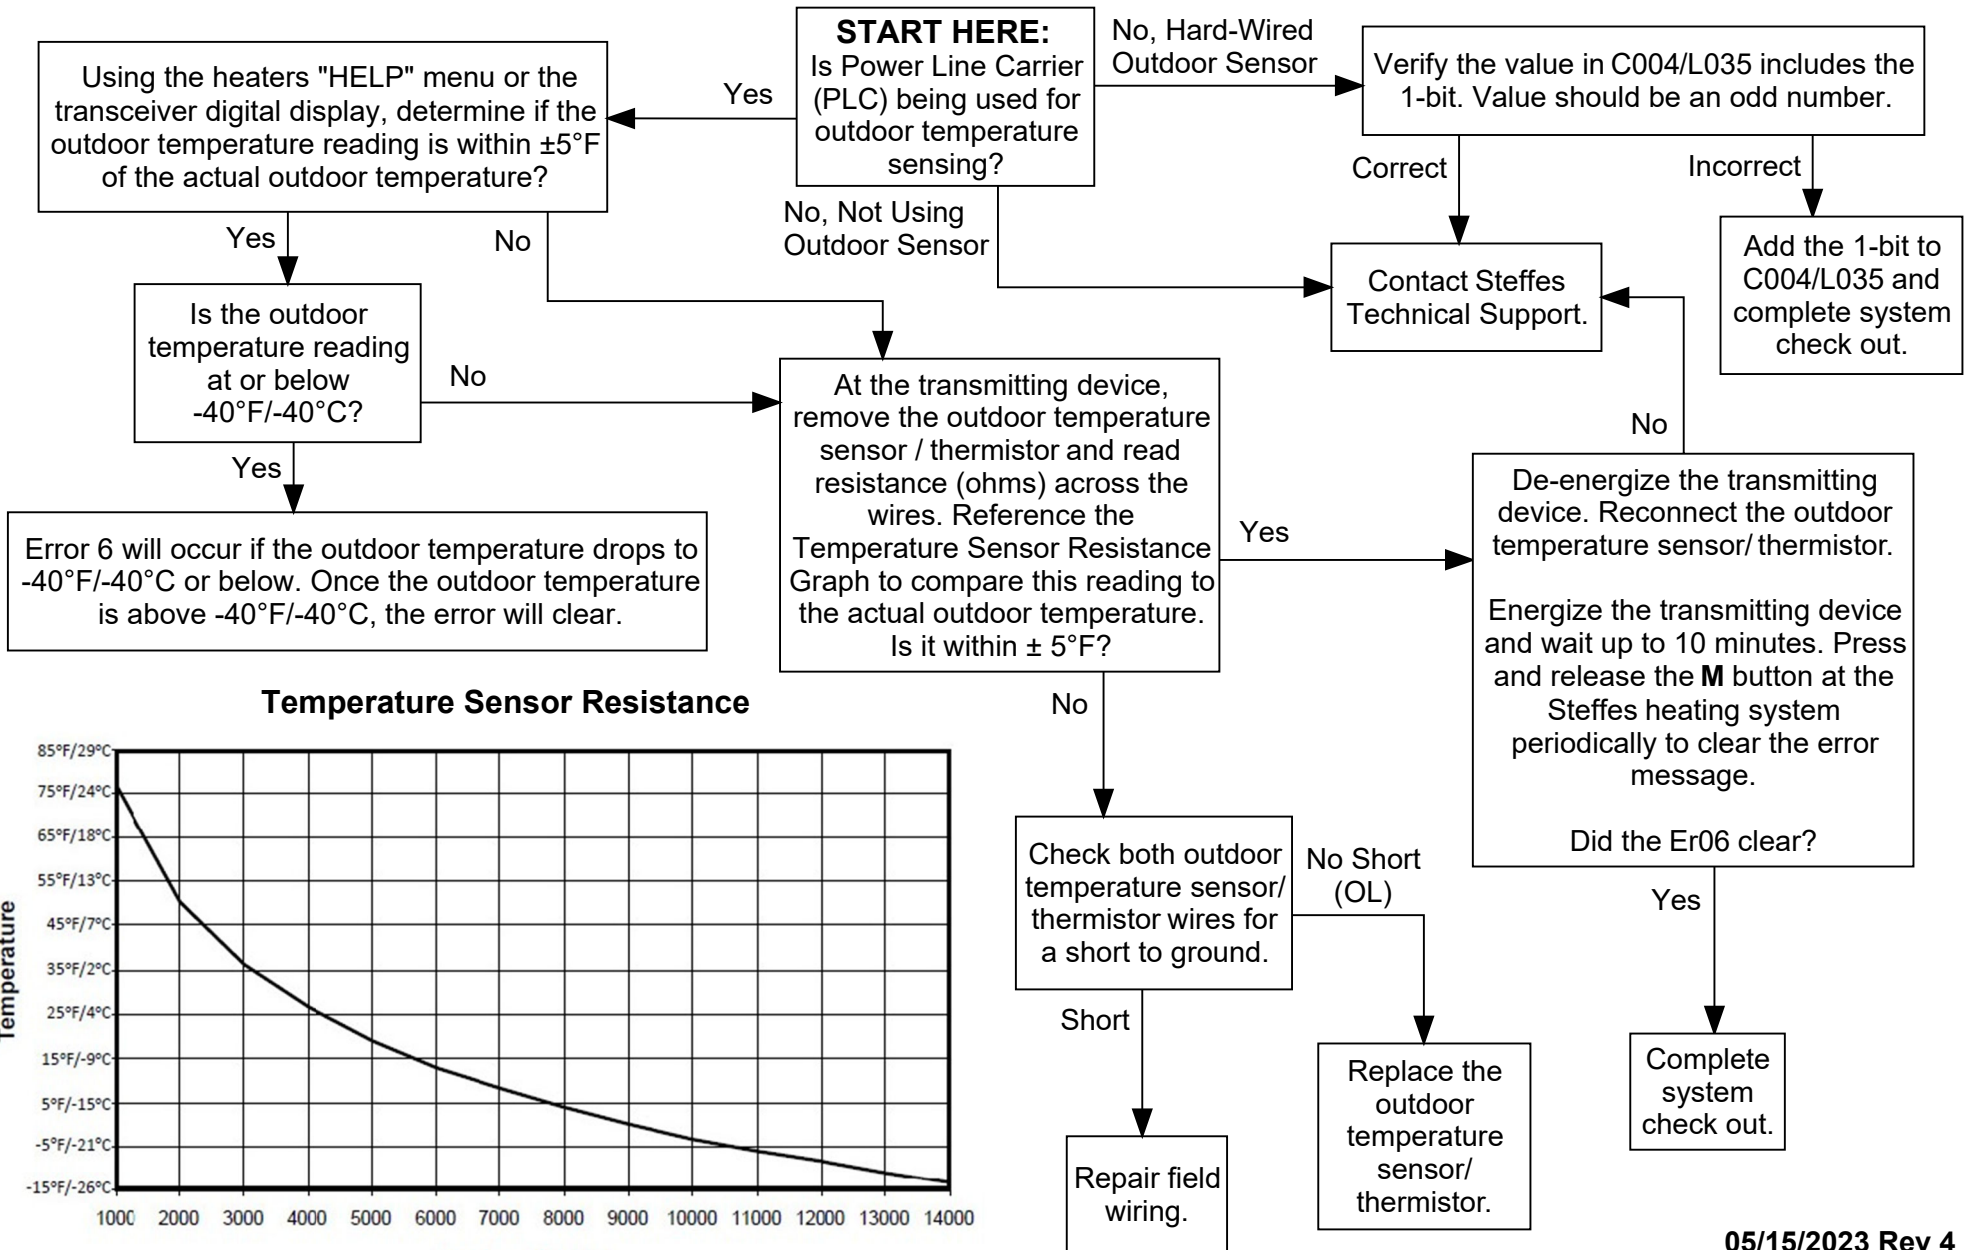

Temperature Sensor Resistance

